

<http://tor-in-honda.com/Rjanisis/pubs/sm/1/2/Contents/enu/61T6ZD/RIN/SCT/...> 4/4/2017

Resetting the Parking and Back-Up Sensor Control Unit

Procedure

1. Parking and Back-Up Sensor Control Unit - Reset

Reset the parking and back-up sensor control unit after doing any of the following actions:

- When you replace the parking and back-up sensor.
- When you change the parking and back-up sensor mounting location from the original location.

NOTE: Before performing the resetting procedure, make sure that each the parking and back-up sensor is connected.


Resetting Procedure

1. Turn the vehicle to the ON mode.
2. Press the parking and back-up sensor switch 10 times, within 10 seconds.

NOTE: Parking and back-up sensor switch indicator is blinks.

3. Turn the vehicle to the OFF (LOCK) mode.
4. Press and hold the parking and back-up sensor switch.
5. Turn the vehicle to the ON mode.
6. Wait about 10 seconds.

NOTE: When the resetting the parking and back-up sensor control unit is successful, the buzzer sounds for 2 seconds.

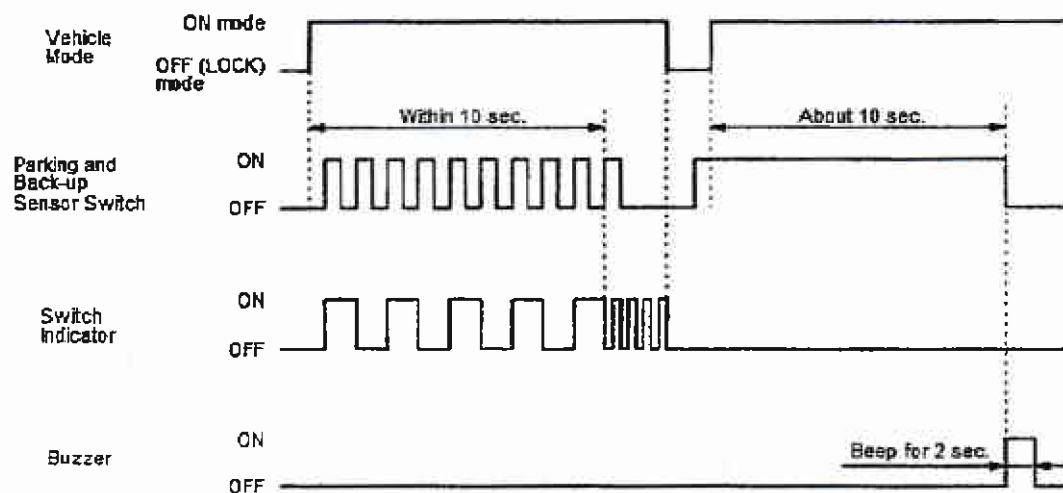

7. Press the parking and back-up sensor switch.