



• Inspection/correction of the front-radar mounting angle (FCA/SCC)

Purpose	This is the function for inspecting and correcting the vehicle-mounting angle of the front radar.
Enable Condition	<ul style="list-style-type: none">1. Engine stopped2. IG ON3. No DTC other than C1620 (alignment failed).
Concerned Component	<ul style="list-style-type: none">- UNIT ASSY-FCA- UNIT ASSY-SCC- UNIT ASSY-FR RADAR
Concerned DTC	C1620
Fail Safe	Warning lamp ON
Etc	<p>When a sensor of the front radar needs to be corrected</p> <ul style="list-style-type: none">1. When the front radar is remounted after removal and replacement2. When C1620 (alignment failed) DTC occurs3. When the front radar and its vicinity are impacted by collision including minor collisions4. When there is an error including FCA, SCC, and HDA in the detection/sensing function of the front

OK



Do not touch any system buttons while performing this function.